

Liebert® PSI XR™

User Manual—1000/1500/2200/3000, 120VAC



TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	1
GLOSSARY OF SYMBOLS	3
1.0 INTRODUCTION	4
2.0 WHAT'S INCLUDED	6
3.0 INSTALLATION	7
3.1 Preparation	7
3.2 Tower UPS Installation	8
3.3 Rack-Mount UPS Conversion and Installation	9
3.4 Orient Display for Installation	10
3.5 Charge Batteries and Perform Battery Startup	10
3.6 Connect Input Power and Load	10
3.7 Connect Network Surge protection	11
3.8 Connect Communication Interface	11
3.9 Set Up Liebert MultiLink software	12
3.10 EPO Switch	12
3.11 External Battery Cabinet Installation	13
4.0 CONTROLS AND INDICATORS	15
4.1 Control Buttons	16
4.1.1 On/Alarm Silence/Manual Self-Diagnostic Test	16
4.1.2 Off Button	16
4.2 Status Indicators	16
4.2.1 Status Change Button	16
4.2.2 Load Level Indicator	16
4.2.3 Battery Level Indicator	17
4.2.4 UPS Status Indicators	17
5.0 OPERATIONAL MODES	18
5.1 Normal Mode	18
5.2 Buck/Boost Mode	18
5.3 Battery Mode	18
5.4 Battery Recharge Operation	18

6.0	COMMUNICATION	19
6.1	DB-9 Connector	19
6.2	Remote Shutdown Via the DB-9 Connector	19
6.2.1	Any Mode Shutdown Via Pins 5 & 6	19
6.2.2	Battery Mode Shutdown Via Pins 4 & 5	19
6.3	Network Surge Protection Connectors	19
6.4	UPS Communications	20
6.5	UPS Inverter/Transfer Voltage Configurations	20
7.0	BATTERY MAINTENANCE	21
7.1	Battery Charging, Storage	21
7.2	Internal Battery Replacement Procedure	21
8.0	SPECIFICATIONS	22
9.0	TROUBLESHOOTING	26

FIGURES

Figure 1	Front view of UPS	4
Figure 2	1000 and 1500—rear view	4
Figure 3	2200—rear view	5
Figure 4	3000—rear view	5
Figure 5	Accessories	6
Figure 6	Placing the Liebert PSI XR	7
Figure 7	Tower configuration—attach Tower Stands	8
Figure 8	Convert the Liebert PSI XR for rack installation	9
Figure 9	Orienting the UPS display	10
Figure 10	Connect input power and load	10
Figure 11	Connect network surge protection	11
Figure 12	Connect communication interface	11
Figure 13	EPO connection for normally open operation	12
Figure 14	Install the external battery cabinet in tower installation	13
Figure 15	Connect battery cabinets to UPS	14
Figure 16	Display and status indicators	15
Figure 17	DIP switch settings for 120V system	20
Figure 18	Battery replacement	21

TABLES

Table 1	Battery cabinet connector color key	13
Table 2	Display and status indicators function, legend	15
Table 3	Status indicators—color, illumination mode	17
Table 4	DB-9 pin assignment	19
Table 5	Voltage configurations	20
Table 6	Liebert PSI XR specifications	22
Table 7	Battery cabinet specifications	23
Table 8	Liebert PSI XR battery run times	24
Table 9	Troubleshooting—problems, causes and solutions	26

IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

This manual contains important instructions that should be followed during installation and maintenance of the UPS.

- Intended for installation in a temperature-controlled, indoor area free of conductive contaminants.
- Maximum ambient temperature 104°F (40°C).

Read this manual thoroughly before attempting to install or operate this UPS.

The equipment can be installed and operated by individuals without previous training.

Size of Branch Circuit Overcurrent Protection



CAUTION

To reduce the risk of fire, connect PS3000RT3-120XR models only to a circuit provided with 30 amperes maximum branch circuit overcurrent protection in accordance with the National Electric Code, ANSI/NFPA 70. Other Liebert PSI models must be connected to a circuit with 20 amperes maximum branch circuit overcurrent protection.



WARNING

Operate the UPS only from a properly grounded (earthed) 110-127VAC, 50Hz or 60Hz AC supply.

Some components are live, even when AC power is disconnected. For service, contact a properly trained and qualified technician. Do not remove the cover; the UPS has no user-serviceable parts inside except the internal battery pack.



WARNING

Although the UPS has been designed and manufactured to ensure personal safety, improper use can result in electrical shock or fire. To ensure safety, observe the following rules:

- Turn Off and unplug the UPS before cleaning it. Clean the UPS with a dry cloth. Do not use liquid or aerosol cleaners.
- Do not install or operate the UPS in or near water.
- Never block or insert any objects into the ventilation holes or other openings of the UPS. Keep all vents free of dust accumulation that could restrict air flow.
- Do not place UPS power cord anywhere it might be damaged.

Battery Handling Precautions



WARNING

Batteries should be replaced only by properly trained and qualified personnel knowledgeable of batteries and required precautions.

A battery can present a risk of electrical shock and high short-circuit current. The following precautions must be observed when working on batteries:

- Remove watches, rings and other metal objects.
- Use tools with insulated handles.
- Do not dispose of the battery or batteries in a fire. The battery may explode.
- Do not open or mutilate the battery or batteries. Released electrolyte is toxic. It may cause injury to the skin and eyes.
- When replacing the battery, use the same type of battery as is listed in **Table 5**.
- Handle, transport and recycle batteries in accordance with local regulations.

CONDITIONS OF USE—The input supply outlet must be within 6 ft. (1.8m) of the UPS and be easily accessed.

This UPS provides conditioned power to connected equipment. It is not intended for use with life-support and other designated “critical” devices. Maximum load must not exceed that shown on the UPS rating label. If uncertain, consult your local dealer, local Emerson Network Power representative or Channel Support Applications.

When installing the UPS or making input and output connections, comply with all relevant safety codes and standards (e.g., UL 1778).

Placing magnetic storage media on top of the UPS may result in data corruption.

ELECTROMAGNETIC COMPATIBILITY—The Liebert PSI XR complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment uses, generates and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference with radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the UPS and the receiver.
- Connect the UPS to an outlet on a circuit different from the one the receiver is connected to.

NOTICE

Do not connect equipment that could overload the UPS or demand half-wave rectification from the UPS, such as electric drills, vacuum cleaners, laserjet printers and hair dryers.

GLOSSARY OF SYMBOLS



Risk of electrical shock



Indicates caution followed by important instructions



Indicates the unit contains a valve-regulated, lead-acid battery



Recycle



DC voltage



Equipment grounding conductor



Bonded to ground



AC voltage



ON/Alarm Silence/Manual Self-Diagnostic Test



OFF



Status Change Button

1.0 INTRODUCTION

The Liebert PSI™ XR is a 2U, line-interactive UPS that may be installed in a rack or used as a tower UPS.

Status indicators on the front of the Liebert PSI XR display load level, battery level, buck/boost, site-wiring fault, overload, battery status and UPS operation. Controls include a combination On/Alarm Silence/Manual Self-Diagnostic Test button, an Off button and a Status Change button.

The Liebert PSI XR has USB, DB-9 (contact closure) and Liebert IntelliSlot® ports. The DB-9 and USB ports provide detailed operating information including voltages, currents, and alarm status to the host system when used in conjunction with Liebert MultiLink™ software.

The Liebert PSI XR is compliant with the Restriction of Hazardous Substances Directive (ROHS), prohibiting use of six hazardous materials manufacturing of electronics, including lead-free solder.

Figure 1 Front view of UPS



**Liebert PSI XR
rack-mount configuration
Display rotates for use as tower**



**Liebert PSI XR
tower configuration
Display rotates for use in rack**

Figure 2 1000 and 1500—rear view

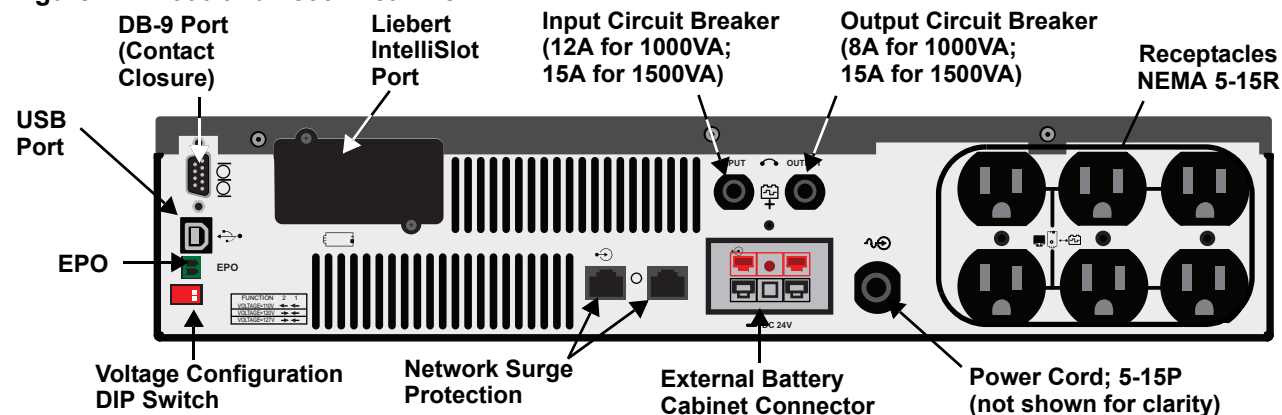


Figure 3 2200—rear view


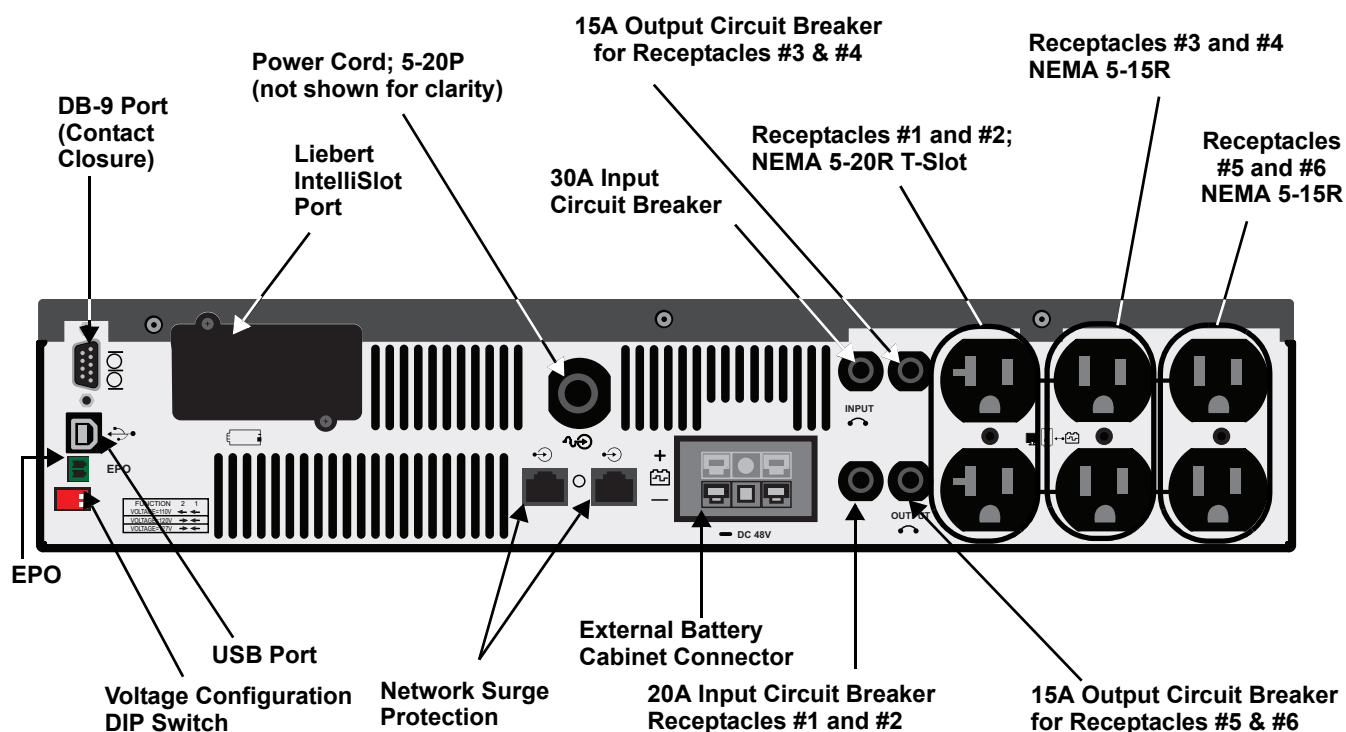


Figure 4 3000—rear view

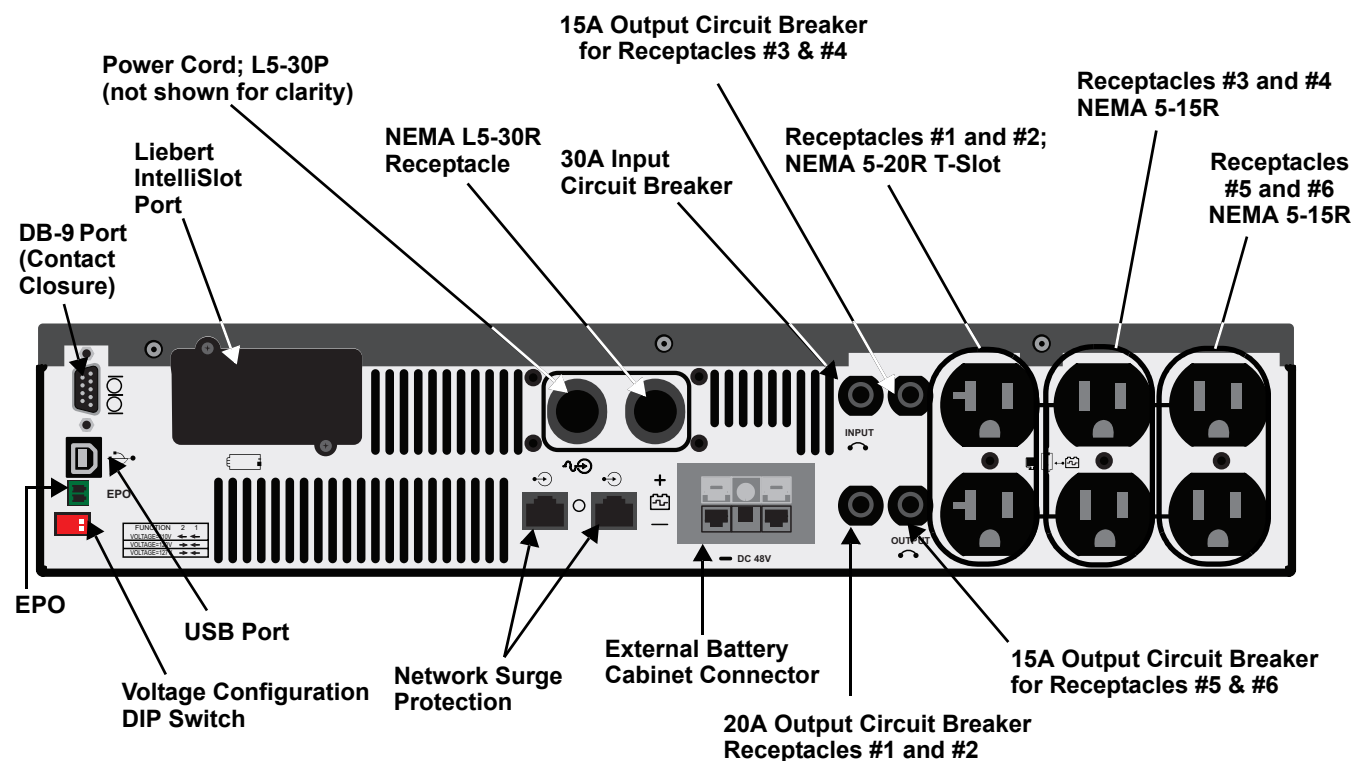


2.0 WHAT'S INCLUDED

The Liebert PSI XR is shipped with the following items:

- Multi-Language User Manual on CD
- Liebert MultiLink Software and User Manual, downloadable at multilink.liebert.com
- Contact Closure (ML9P9S) Cable
- USB Cable
- Tower Stands
- Mounting Hardware
- Rack-Mount Handles
- Fixed Mounting Rails
- EPO Connector
- Battery-UPS Tab

Figure 5 Accessories

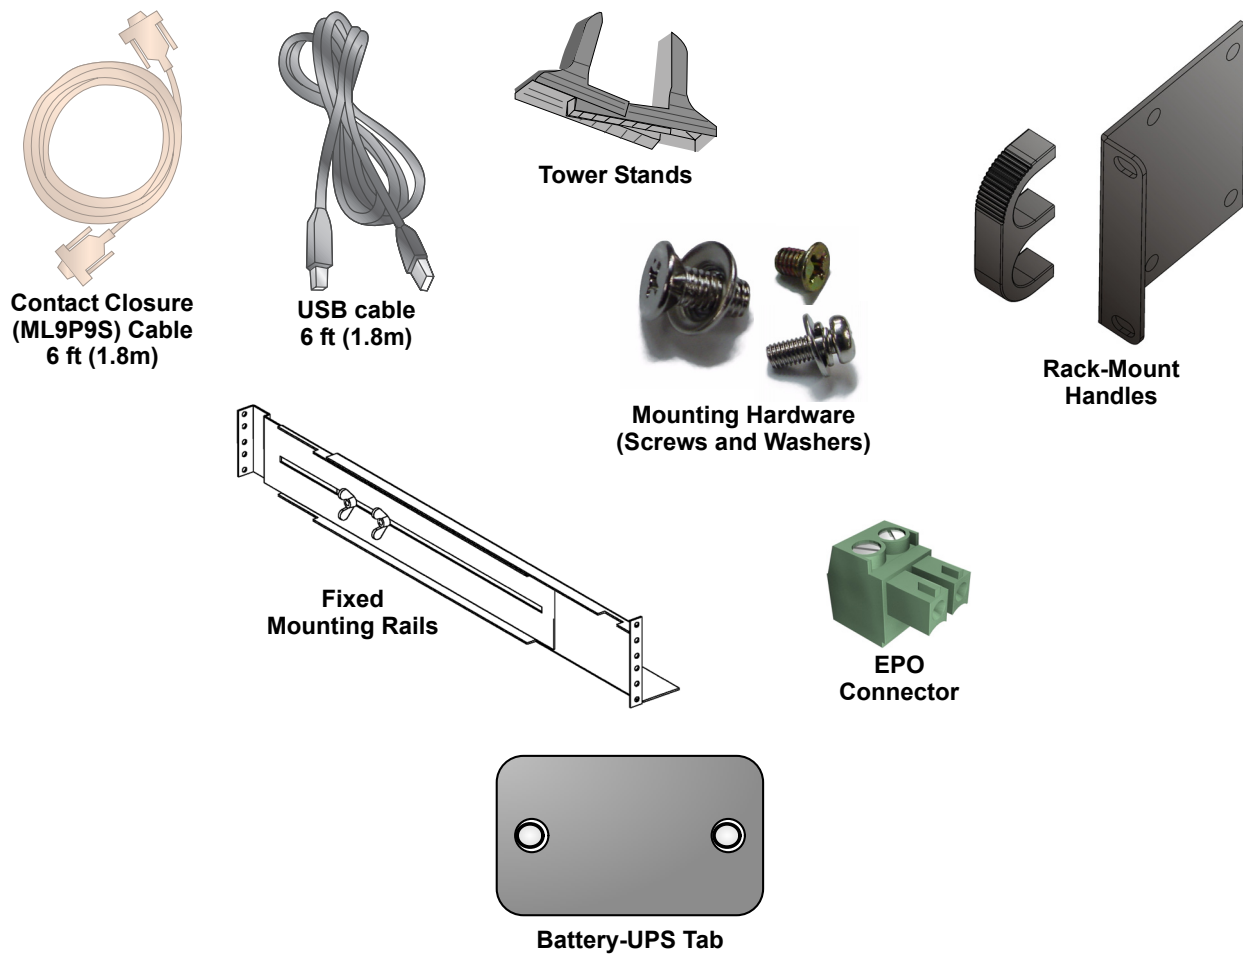

3.0 INSTALLATION

3.1 Preparation



CAUTION


The UPS and battery cabinets are heavy (see **Table 6** and **Table 7**). Take proper precautions when lifting or moving either the UPS or battery cabinets.

The Liebert PSI XR may be installed in either a tower or rack configuration. Determine the method that suits the application and proceed.

Decide where to install the Liebert PSI XR. The UPS must be installed indoors in a controlled environment. Place it in an area with unrestricted airflow around the unit, away from water, flammable liquids, gases, corrosives and conductive contaminants (see **Figure 6**).

Maintain a minimum clearance of 12 inches (305mm) in the front and rear of the UPS. Maintain an ambient temperature range of 32°F to 104°F (0°C to 40°C).


Figure 6 Placing the Liebert PSI XR

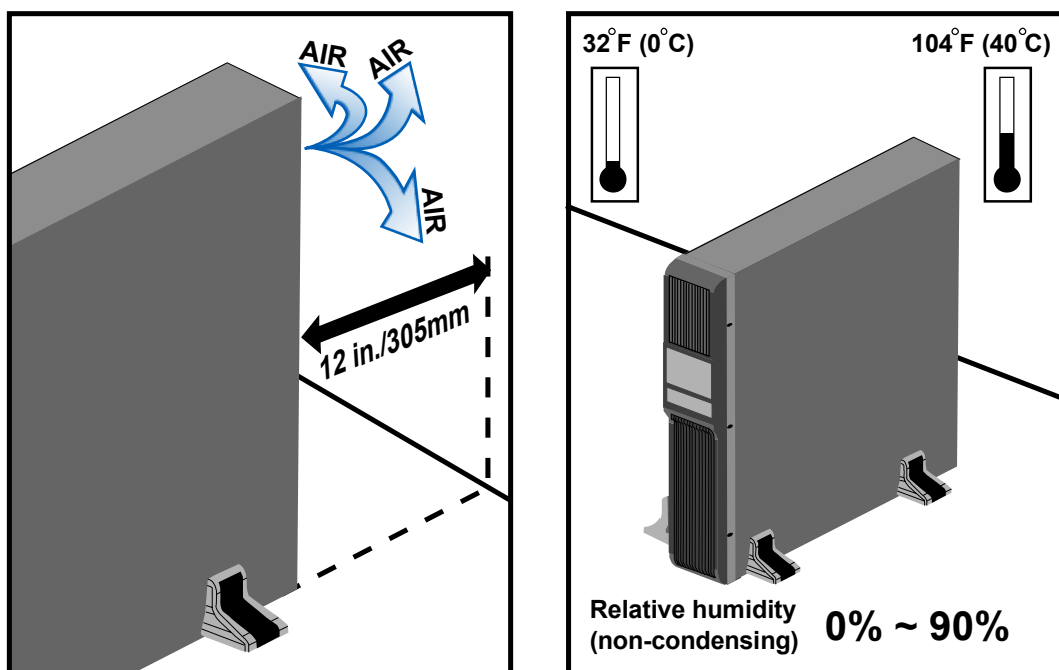

3.2 Tower UPS Installation

See **Figure 7** when using the Liebert PSI XR in a tower configuration.

Figure 7 Tower configuration—attach Tower Stands

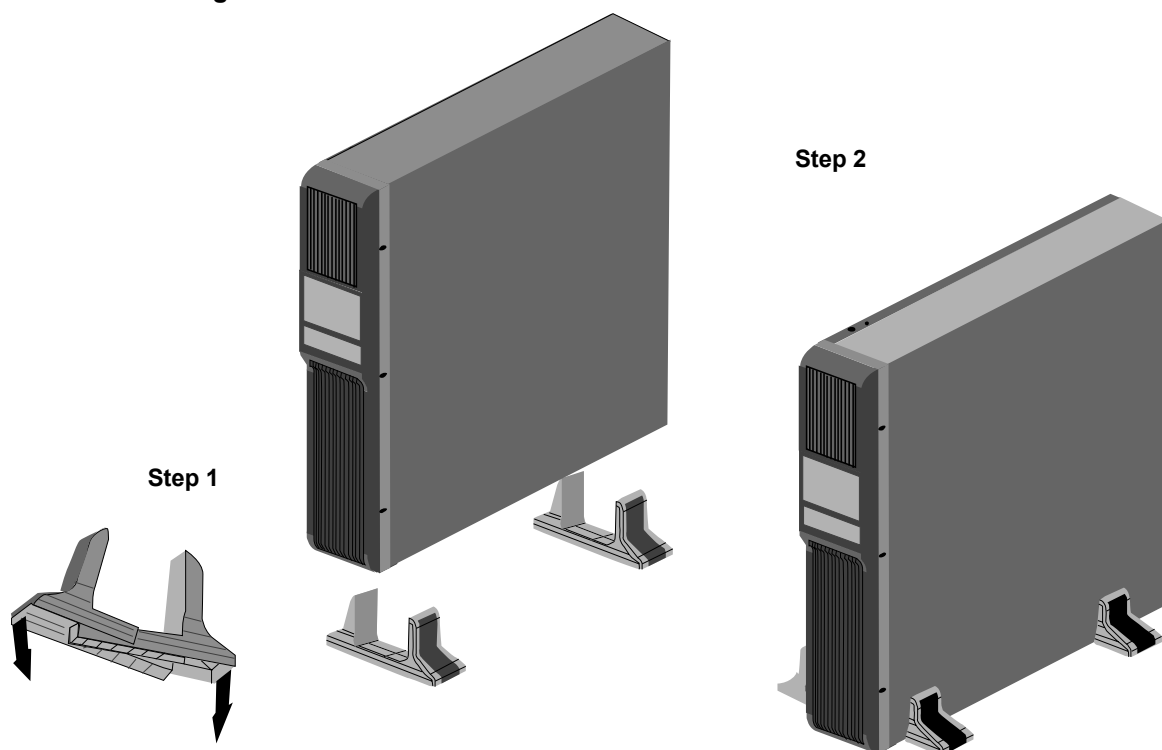

3.3 Rack-Mount UPS Conversion and Installation

See **Figure 8** when installing the Liebert PSI XR in a rack. External battery cabinets are installed in same manner.

Figure 8 Convert the Liebert PSI XR for rack installation


Step 1




Step 2




Step 3

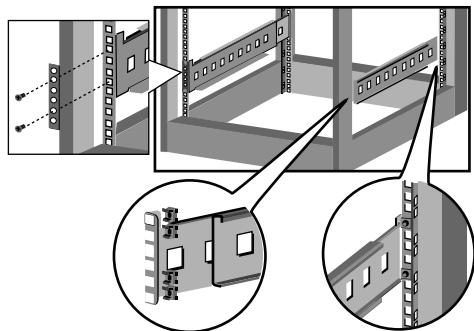

Step 4

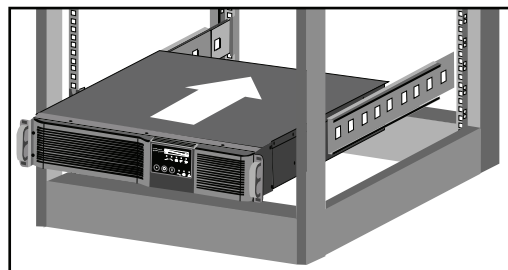

Step 5

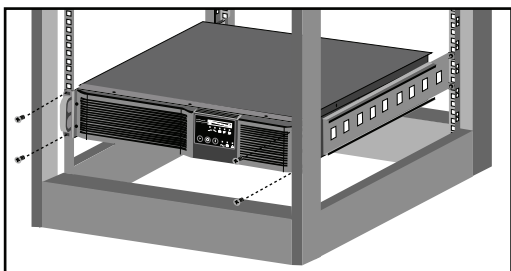

WARNING

Placing heavy equipment near the top of a rack may increase the risk of tipping. Place the UPS, and battery cabinet if one is being used, in the bottom of the rack.



CAUTION

Lifting equipment into rack may be a two-person job, depending on weight of equipment.

NOTICE

When rack-mounted, the UPS must be supported by a shelf, slide rails, brackets or fixed rails on each side. The rack-mount handles **WILL NOT** support the weight of the UPS. They are used to move the UPS into and out of the rack.

3.4 Orient Display for Installation

The Liebert PSI XR features a rotating display that may be oriented for either tower or rack installations.

To set the display for your installation, pull out on the display and rotate it until it is oriented correctly, then press it into the UPS until it is seated.

Figure 9 Orienting the UPS display



3.5 Charge Batteries and Perform Battery Startup


Before connecting input power or connecting the load, Emerson recommends these steps:

- Charge the battery for at least 8 hours.
- Start the UPS on battery to ensure the battery is fully functional and charged.
- Turn the unit Off and proceed to **3.6 - Connect Input Power and Load**.

3.6 Connect Input Power and Load

Connect input power to the UPS, then plug the equipment into the outlets on the rear of the UPS. These UPS outlets provide battery backup and surge protection to the equipment when utility power fails, spikes or sags (see **Figure 10**).


Figure 10 Connect input power and load

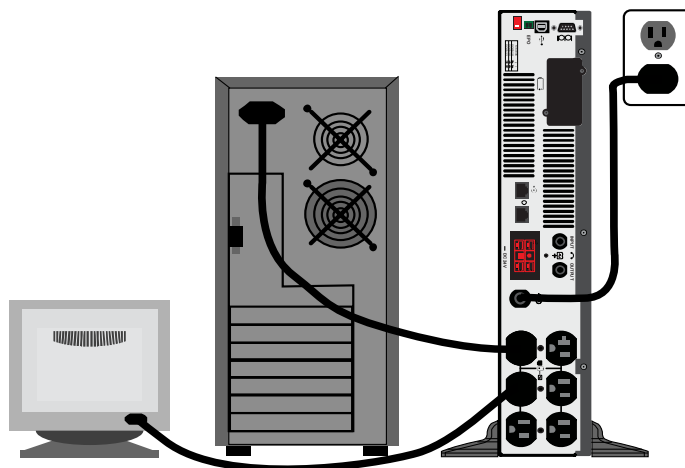

3.7 Connect Network Surge protection

Connect a 10 base-T/100 network cable to the network surge protection IN jack on the rear of the UPS. Connect from the OUT jack with network cabling to network equipment (see **Figure 11**).

Figure 11 Connect network surge protection

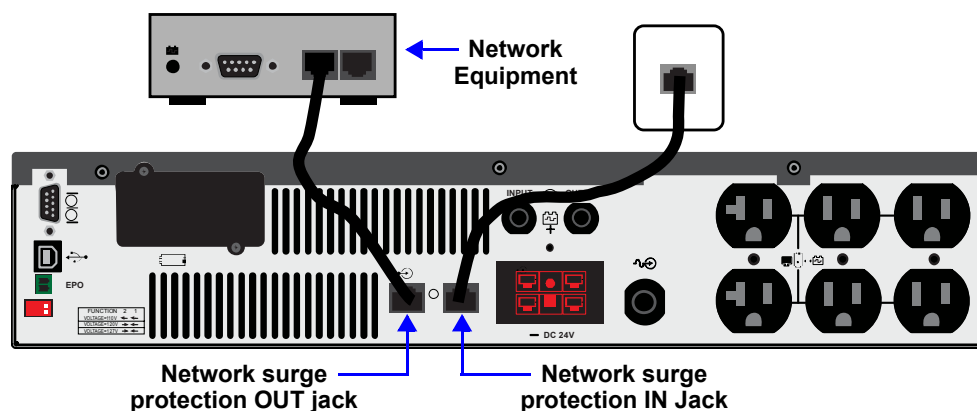

3.8 Connect Communication Interface


Determine what type of communication connection to use to manage the UPS. The Liebert PSI XR can be monitored with any of these communication methods:

- Contact closure
- USB
- SNMP (requires optional IS-WEBRT3 card)

Connect the appropriate, factory-supplied cable to the interface port on the rear of the UPS and to the computer interface port.

See **3.9 - Set Up Liebert MultiLink software** for details and installation information. Also refer to **6.4 - UPS Communications**.

Figure 12 Connect communication interface

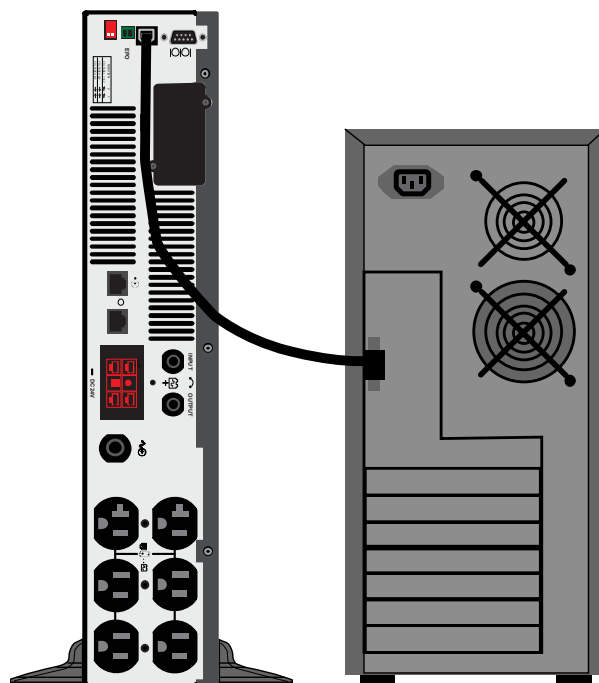

3.9 Set Up Liebert MultiLink software

To start using Liebert MultiLink (software and user manual available at multilink.liebert.com):

- Install the software.
See the Liebert MultiLink quick-start guide or user manual for installation instructions.
- Connect one end of the USB cable (supplied) to the USB port on the rear of the UPS. Connect the other end to a USB port on the computer.
See the Liebert MultiLink user manual for operating instructions.




NOTE

*Emerson recommends connecting the USB cable directly to the computer **WITHOUT** using a USB hub.*

3.10 EPO Switch

The Liebert PSI XR is equipped with an Emergency Power Off (EPO) switch. The user must supply a means of interfacing with the EPO circuit to allow disconnecting the UPS input feeder breaker to interrupt all sources of power to the UPS and connected equipment to comply with national and local wiring codes and regulations.

Figure 13 EPO connection for normally open operation

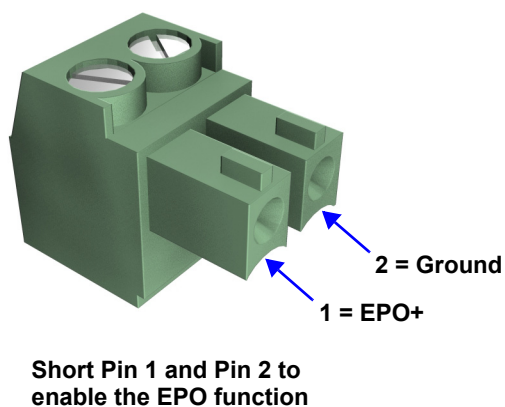


3.11 External Battery Cabinet Installation

Optional Liebert external battery cabinets may be connected to the UPS to provide additional battery run time. External battery cabinets are designed to be placed all on one side of the UPS or stacked beneath the UPS. The batteries have a maximum run time of three hours at full load.

1. Install the external battery cabinet in tower- or rack-configuration (see **Figure 14** or **3.3 - Rack-Mount UPS Conversion and Installation**).
2. Connect the external battery cabinet cable to the rear of the external battery cabinet, then to the rear of the UPS (see **Figure 15**).

Figure 14 Install the external battery cabinet in tower installation

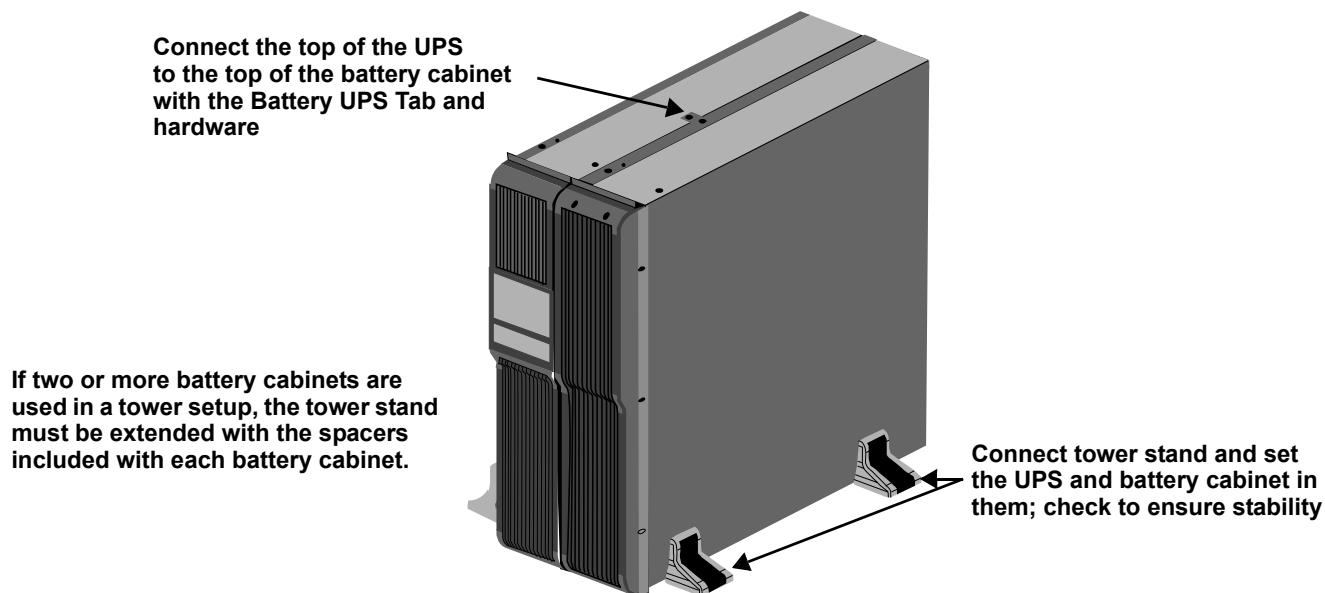


NOTICE

External battery cabinet power connectors are color-coded as noted in **Table 1**. Do not try to install external battery cabinets with connectors that are a different color from the battery connector on the UPS.

Table 1 Battery cabinet connector color key

UPS Model	Nominal System Voltage (connector color)	External Battery Cabine Model
PS1000RT3-120XR PS1000RT3120XRW	24VDC (Red)	PSRT3-24VBXR
PS1500RT3-120XR PS1500RT3120XRW		
PS2200RT3-120XR PS2200RT3120XRW	48VDC (Gray)	PSRT3-48VBXR
PS3000RT3-120XR PS3000RT3120XRW		

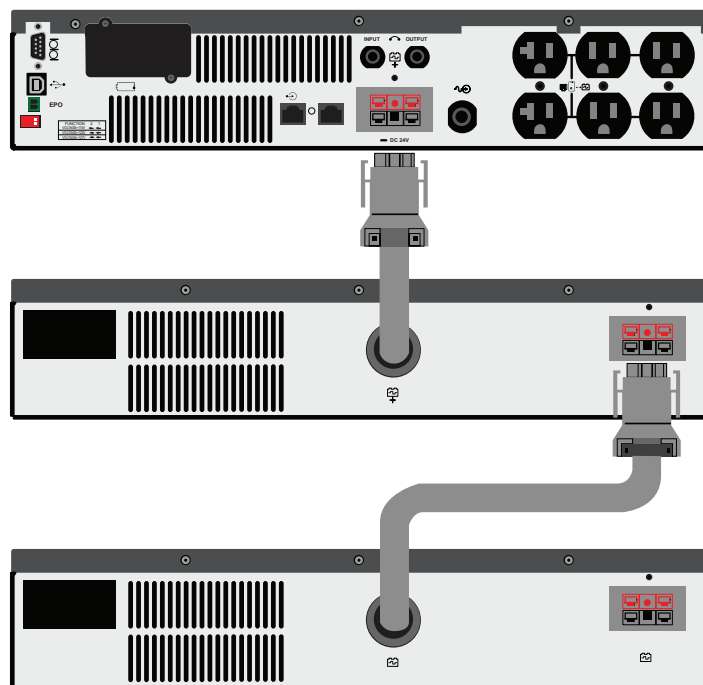Figure 15 Connect battery cabinets to UPS

See **Table 8** for approximate battery run times.

4.0 CONTROLS AND INDICATORS

Buttons on the front panel display control the Liebert PSI XR. Eight LEDs indicate the UPS's status. Refer to **Figure 16** and **Table 2**.

Figure 16 Display and status indicators

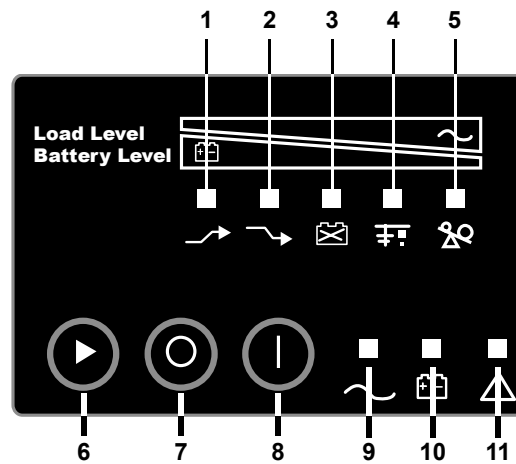


Table 2 Display and status indicators function, legend

Item	Name	Status Indicators	Description
1	LED 1	AVR Boost	UPS Operation in AVR Boost Mode
2	LED 2	AVR Buck	UPS Operation in AVR Buck Mode
3	LED 3	Battery Condition	Battery Fault/Weak
4	LED 4	Grounding/Site Wiring Fault	UPS Grounding/Site Wiring Fault
5	LED 5	Overload	UPS Overload
1 to 5	Load/Battery Level		Indicate Load/Battery Level
6	Status Change Button		Switches Display from Load Level Indicators to Battery Level Indicators
7	OFF Button		UPS Off
8	ON Button		Turn on UPS, Manual Self-Diagnostic (Normal Mode), Silence Alarm (Battery Mode)
9	LED 9	Normal Mode	UPS Operation in Normal Mode
10	LED 10	Battery Mode	UPS Operation in Battery Mode
11	LED 11	UPS Fault	UPS Fault

4.1 Control Buttons



4.1.1 On/Alarm Silence/Manual Self-Diagnostic Test

This button controls output power to connected load(s). It has three functions:

- On
- Alarm Silence
- Manual Self-Diagnostic Test

ON—Start the UPS by pressing this button for more than 3 seconds, then releasing the button (an alarm will sound briefly). If the ON button is pressed and utility is outside input parameters, the UPS will start on battery (dark start).

Alarm Silence—Silence a battery mode audible alarm by pressing this button for longer than one second, then releasing it.

Manual Self-Diagnostic Test—To initiate a Manual Self-Diagnostic, press this button for at least three (3) seconds while operating from utility power. UPS will switch to Battery Mode to detect battery voltage and whether the UPS is operating normally.

If LED indicates the battery is weak: Allow the UPS to recharge the batteries for 8 hours. Retest the battery after recharge.

If LED still indicates the battery is weak after the battery has been retested, contact your local dealer, local Emerson representative or Channel Support Applications.

If LED indicates a Battery Fault: Contact your local dealer, local Emerson representative or Channel Support Applications.

If LED indicates a UPS Fault: Remove the load, retest the self diagnostic test, if LED indicated UPS Fault, Contact your local dealer, local Emerson representative or Channel Support Applications.



NOTE

Refer to **Figure 16** and **Table 2** for details about the LEDs' meaning.



4.1.2 Off Button

When the UPS is operating in either Normal Mode or Battery Mode, pressing the Off button for more than three seconds will shut down the UPS.

4.2 Status Indicators



4.2.1 Status Change Button

The Status Change button determines the information displayed by the five LEDs on the front panel. The default information shown by the LEDs is the load level on the UPS. Pressing the Status Change button while the UPS is On prompts the LED display to show battery capacity for 5 seconds. This function assists in assessing the meaning of status indicators as described in **4.2.4 - UPS Status Indicators**. See **Figure 16** and **Table 2** for the Status Change button's location.

4.2.2 Load Level Indicator

The five LEDs at the top of the front panel illuminate with a steady glow to indicate the load level on the output of the UPS. The LEDs show the load level as a range, $\pm 5\%$. The LEDs' load level meanings and colors are:

LED 1	LED 2	LED 3	LED 4	LED 5
10-24% — Green	25-49% — Green	50-74% — Yellow	75-99% — Yellow	100% or greater — Red

4.2.3 Battery Level Indicator

The five LEDs illuminate with a steady glow to indicate battery capacity. Battery capacity is shown for five seconds after the Status Change button is pressed. The LEDs show the battery capacity as a range, $\pm 5\%$. The LEDs' battery level meanings and colors are:

LED 1	LED 2	LED 3	LED 4	LED 5
100-76% — Green	75-51% — Green	50-26% — Yellow	25-11% — Yellow	10% or less — Red

4.2.4 UPS Status Indicators

LEDs on the display panel illuminate with a steady glow or flash to indicate the UPS's status:

Normal Mode—The Normal Mode indicator illuminates (LED 9) with a steady glow when utility power is available and within the input specifications.

Battery Mode—The Battery Indicator illuminates (LED 10) with a steady glow when the UPS is operating on battery.

AVR Boost, AVR Buck—When the UPS is in AVR Boost/Buck Mode, the LED display will indicate the relative load level on the output of the UPS and will flash LED 1 (boost) or LED 2 (buck) to indicate which mode the UPS is in.

Weak Battery—When the UPS battery voltage is low, the LED display will indicate the relative load level on the output of the UPS and LED 3 will flash as a warning.

Site-Wiring Fault—In case of a site-wiring fault, the LED display will indicate the relative load level on the output of the UPS and LED 4 will flash as a warning.

Overload—When UPS operates in overload status, the LED display will indicate the relative load level on the output of the UPS and LED 5 will flash as a warning.

Table 3 Status indicators—color, illumination mode

Status	LED 1	LED 2	LED 3	LED 4	LED 5	LED 9	LED 10	LED 11
Normal Mode						Green Steady		
AVR Boost	Green Flashes					Green Steady		
AVR Buck		Green Flashes				Green Steady		
Battery Mode (dark start)							Yellow Steady	
Weak Battery			Yellow Flashes					
Site-Wiring Fault				Yellow Flashes				
Overload					Red Flashes			
Battery Fault Shutdown			Yellow Steady					Red Steady
Overload Shutdown					Red Steady			Red Steady
UPS Output Abnormal Shutdown							Yellow Steady	Red Steady

5.0 OPERATIONAL MODES

5.1 Normal Mode

When the UPS is in Normal Mode, the Normal Mode Indicator illuminates green.

5.2 Buck/Boost Mode

The Automatic Voltage Regulator (AVR) circuitry compensates for fluctuations in utility power, such as voltage surges and sags. When the Liebert PSI XR detects an abnormality, it raises the undervoltage (boost) or lowers the overvoltage (buck) as needed. The AVR operates automatically and maintains the output voltage to the connected equipment, without utilizing the batteries.

LED 1 flashes green and LED 9 illuminates steady green when the UPS is in Boost Mode. LED 2 flashes green and LED 9 illuminates steady green when the UPS is in Buck Mode (see **9.0 - Troubleshooting** for details).

5.3 Battery Mode

The UPS switches to Battery Mode in the event of an extreme input voltage/frequency condition or utility failure.

When the UPS is in Battery Mode, the Battery Indicator illuminates amber and an alarm sounds at two-second intervals. As capacity decreases, fewer indicators remain illuminated.

When a Low Battery condition occurs, the Battery Indicator flashes amber and an alarm sounds at one-second intervals. Refer to **Table 8** for approximate battery run times.

5.4 Battery Recharge Operation

Once utility power is restored, the UPS resumes normal operation and the Battery Charger begins recharging the batteries.

6.0 COMMUNICATION


6.1 DB-9 Connector

The UPS has a DB-9 (9 pin female) connector on the rear to allow UPS status communications with a computer running Liebert MultiLink software in contact closure mode. The connection provides On Battery and Low Battery notification.

When power is interrupted and battery power is low, Liebert MultiLink software can signal the host computer to gracefully shut down the operating system.

Table 4 DB-9 pin assignment

DB-9 Pin	Assignment Description
1	Low Battery (open collector)
2	UPS TxD (not used)
3	UPS RxD (not used)
4	Remote Shutdown (5-12V); on-battery operation
5	Common
6	Output Off, (short to Pin 5, non-latching); any mode operation
7	Low Battery (open emitter)
8	Utility Fail (open emitter)
9	Utility Fail (open collector)

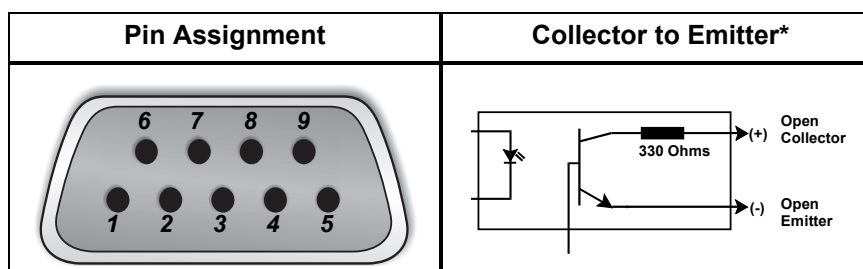

6.2 Remote Shutdown Via the DB-9 Connector

The Liebert PSI XR can be shut down remotely by shorting Pins 5 and 6 or via Pins 4 and 5 of the DB-9 connector.

6.2.1 Any Mode Shutdown Via Pins 5 & 6

When Pin 6 is shorted to Pin 5, the UPS output is shut Off no matter what mode the UPS is operating in. The UPS cannot be started as long as the pins are shorted. When the short is removed, the UPS output can be enabled by pressing the ON/Alarm Silence/Manual Self-Diagnostic Test button.

6.2.2 Battery Mode Shutdown Via Pins 4 & 5

While the UPS is operating on battery, a 5-12VDC signal for 2 seconds or longer is required to signal a shutdown. Signals for less than 2 seconds are ignored.

After Pin 4 receives the shutdown signal, a 2-minute shutdown timer begins a countdown. The shutdown timer cannot be stopped: If utility power returns during the 2-minute countdown, the shutdown timer continues until the end of 2 minutes and the UPS turns Off. The UPS will restart 10 seconds after utility power returns.

6.3 Network Surge Protection Connectors

Network (in and out) connectors on the rear of the UPS provide transient voltage surge suppression (TVSS) for network devices.

6.4 UPS Communications

The Liebert PSI XR is equipped with a Liebert IntelliSlot port to provide advanced communication and monitoring options.

Liebert MultiLink software continually monitors the UPS and can shut down your computer or server via USB, contact closure and SNMP (via IS-WEBRT3 card) in the event of an extended power failure.

The Liebert IS-WEBRT3 provides SNMP and Web-based monitoring and control of the UPS across the network.



NOTE


The USB, SNMP and contact closure communications can operate in parallel.

6.5 UPS Inverter/Transfer Voltage Configurations

A two-pin DIP switch on the rear of the PSI XR permits setting the UPS to operate at nominal voltages of 110V, 120V or 127V. This feature will change the high and low points at which the UPS switches to battery power. It also changes the UPS' output voltage when the UPS is operating in battery mode. The factory default setting is 120 VAC.

Turn Off the UPS before making any changes to the voltage configuration.

Figure 17 DIP switch settings for 120V system

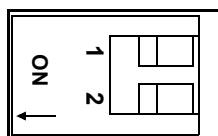

FUNCTION	2	1
Voltage = 110V	←	→
Voltage = 120V	←	←
Voltage = 120V	→	→
Voltage = 127V	→	←

Table 5 Voltage configurations

Setting	Input Voltage Range	Output Voltage (Battery Mode)
110	83~138	110VAC
120	90~150	120VAC
127	96~159	127VAC

7.0 BATTERY MAINTENANCE

7.1 Battery Charging, Storage

The batteries are valve-regulated, nonspillable, lead acid and must be kept charged to retain their design life. The Liebert PSI XR continuously charges the batteries when connected to the utility supply, even while the UPS is switched Off.

If the Liebert PSI XR will be stored for an extended period, Emerson recommends connecting the UPS to input power for at least 8 hours every four to six months to keep the batteries charged.

Emerson recommends performing a monthly manual self-diagnostic test via the Web card or the front panel display.

7.2 Internal Battery Replacement Procedure

NOTICE

This UPS is equipped with internal batteries that the user can replace without shutting down the UPS or connected loads (hot swappable). Caution must be exercised when replacing the batteries because the load is unprotected from power fluctuations and power failures.

To replace the batteries:

1. Remove the two screws on the left side of the front bezel.
2. Pull the front bezel off the UPS.
3. Remove the screw on the battery connector holder.
4. Remove the two screws on the battery bracket.
5. Disconnect the two slotted, red/gray and black battery connectors.
6. Grasp the battery pack assembly by the handle and pull it out of the front of the UPS.
7. Unpack the new battery assembly, taking care not to destroy the packing.
8. Compare the new and old battery assemblies to make sure they are the same. If so, proceed with replacement. If they are different, STOP and contact your local dealer, local Emerson representative or Channel Support Applications.
9. Slide the new battery pack into the UPS.
10. Reattach the battery bracket with the two screws.
11. Reconnect the slotted, red/gray and black battery connectors.
12. Reinsert the screw on the battery connector holder.
13. Reattach the front bezel.

Figure 18 Battery replacement


Step 1




Step 2



Step 3

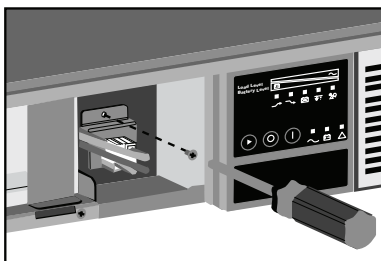


Step 4

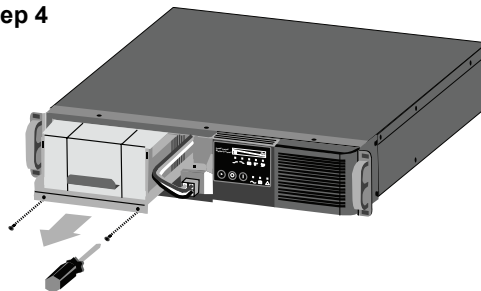

8.0 SPECIFICATIONS

Table 6 Liebert PSI XR specifications

Model Number	PS1000RT3-120XR PS1000RT3120XRW	PS1500RT3-120XR PS1500RT3120XRW	PS2200RT3-120XR PS2200RT3120XRW	PS3000RT3-120XR PS3000RT3120XRW
Power Rating, VA/W	1000VA/900W	1500VA/1350W	1920VA/1920W	3000VA/2700W
Dimensions, W x D x H, in (mm)				
Unit	17.3 x 19.3 x 3.5 (440 x 490.5 x 88)		17.3 x 27.6 x 3.5 (440 x 700.5 x 88)	
Shipping	22 x 24.1 x 9 (560 x 612 x 228)		22 x 34.8 x 9.0 (560 x 884 x 228)	
Weight, lb (kg)				
Unit	56 (25)	62 (28)	92 (42)	105 (48)
Shipping	64 (29)	70 (32)	101 (46)	115 (52)
Input AC Parameters				
Surge Protection	570J			
Voltage Range Without Battery Operation	83-159 VAC (configurable)			
Frequency Range	45~65Hz, (±0.5Hz)			
Input Power Cord, 10ft (3m) attached	NEMA 5-15P plug		NEMA 5-20P plug	NEMA L5-30P plug
Output Receptacles	(6) NEMA 5-15R		(4) NEMA 5-15R (2) NEMA 5-20R T-Slot, accepts 15A Plug	(4) NEMA 5-15R (2) NEMA 5-20R T-Slot, accepts 15A Plug (1) NEMA L5-30R
Voltage (Normal Mode)	110/120/127 VAC (configurable)			
Voltage (Battery Mode)	110/120/127 VAC; ±5% before low-battery warning			
Transfer Time	4-6 ms typical			
Waveform	Sinewave			
Battery Parameters				
Type	Valve-regulated, nonspillable, lead acid			
Quantity x Voltage x Ah	4 x 12 x 7.2	4 x 12 x 9	8 x 12 x 7.2	8 x 12 x 9
Recharge Time	5 hours to 90% of rated capacity, after full discharge into resistive load			
Battery Backup Time				
Full Load	5 minutes			
Half Load	10 minutes			
Environmental				
Operating Temperature, °F (°C)	32 to 104 (0 to 40)			
Storage Temperature, °F (°C)	5 to 104 (-15 to 40)			
Relative Humidity	0% to 90%, non-condensing			
Operating Altitude	Up to 10,000 ft (3000m)			
Audible Noise	<45 dBA			
Agency				
Safety	UL 1778, c-UL Listed			
Surge	ANSI C62.41 CatA Lev3 (surges) IEC61000-4-5			
ESD	IEC61000-4-2			
Susceptibility	IEC61000-4-3			
Electrical Fast Transient	IEC61000-4-4			
Emissions	FCC Part 15, Class A			
Conducted Immunity	IEC61000-4-6			
Harmonics	IEC61000-3-2			
Network surge	UL 497 B			
Transportation	ISTA Procedure 1A Certification			
Environmental	ROHS compliant			
				

* NEC limits the input current rating of the PS2200RT3-120XR and PS2200RT3120XRW models to 80% of the input plug's rating. Up to 2200VA/1980W is available by contacting a certified electrician to change the input plug to 30A plug. Emerson Network Power assumes no liability for damage caused by miswiring or misapplication of the input plug.

Table 7 Battery cabinet specifications

Model Number	PSRT3-24VBXR	PSRT3-48VBXR
Used w/UPS Model	PS1000RT3-120XR PS1000RT3120XRW PS1500RT3-120XR PS1500RT3120XRW	PS2200RT3-120XR PS2200RT3120XRW PS3000RT3-120XR PS3000RT3120XRW
Dimensions, W x D x H, in (mm)		
Unit	17.3 x 19.3 x 3.5 (440 x 490.5 x 88)	
Shipping	22 x 26.6 x 9 (560 x 675 x 228)	
Weight, lb (kg)		
Unit	64 (29)	
Shipping	73 (33)	
Batteries		
Type	Valve-regulated, nonspillable, lead acid	
Quantity x Voltage x Ah	8 x 12 x 7.2	8 x 12 x 7.2
Manufacturer	CSB, YUASA or Equivalent	
Environmental		
Operating Temperature, °F (°C)	32 to 104 (0 to 40)	
Storage Temperature, °F (°C)	5 to 104 (-15 to 40)	
Relative Humidity	0% to 90%, non-condensing	
Maximum Operating Altitude	10,000 ft. (3000m)	
Agency		
Safety	UL 1778, c-UL Listed	
Emissions	FCC Part 15, Class A	
Transportation	ISTA Procedure 1A Certification	

Table 8 Liebert PSI XR battery run times

Number of Batteries	Load %	1000	1500	2200	3000
Internal Battery	10	83	82	76	75
	20	52	48	48	47
	30	31	28	28	28
	40	18	17	17	17
	50	15	13	14	13
	60	12	11	11	11
	70	11	9	9	9
	80	9	7	8	7
	90	7	6	7	6
	100	6	5	5	5
Internal battery + 1 External Battery Cabinets	10	263	222	161	143
	20	165	131	101	83
	30	120	93	69	60
	40	95	68	55	47
	50	73	56	45	32
	60	62	47	31	27
	70	54	33	27	18
	80	48	29	18	16
	90	43	26	17	14
	100	32	18	15	12
Internal battery + 2 External Battery Cabinets	10	439	357	242	205
	20	275	212	152	127
	30	200	150	111	92
	40	157	116	82	68
	50	129	95	68	56
	60	110	76	57	47
	70	96	65	50	33
	80	80	58	44	30
	90	71	52	32	26
	100	65	47	29	18
Internal battery + 3 External Battery Cabinets	10	614	492	322	267
	20	385	291	202	166
	30	280	207	147	120
	40	220	160	116	94
	50	181	131	96	73
	60	154	111	77	62
	70	134	95	67	54
	80	119	79	59	47
	90	106	71	53	43
	100	96	64	48	31

Run times are in minutes, assume fully charged batteries and are typical at 77°F (25°C) with resistive loads.

Table 8 Liebert PSI XR battery run times (*continued*)

Number of Batteries	Load %	1000	1500	2200	3000
Internal battery + 4 External Battery Cabinets	10	790	627	483	330
	20	494	371	303	204
	30	360	264	221	148
	40	283	204	174	116
	50	233	167	143	95
	60	198	141	122	76
	70	172	122	106	66
	80	152	108	94	59
	90	137	96	79	52
	100	124	82	72	48
Internal battery + 5 External Battery Cabinets	10	965	762	564	392
	20	605	452	354	243
	30	440	320	258	176
	40	346	248	203	138
	50	265	203	167	113
	60	242	171	142	96
	70	211	148	124	79
	80	186	131	110	70
	90	167	117	98	62
	100	151	106	84	56
Internal battery + 6 External Battery Cabinets	10	1140	897	644	454
	20	714	531	405	281
	30	520	377	295	204
	40	408	292	232	160
	50	337	239	191	131
	60	286	202	163	112
	70	249	175	142	97
	80	220	154	125	81
	90	197	138	112	72
	100	179	124	102	65

Run times are in minutes, assume fully charged batteries and are typical at 77°F (25°C) with resistive loads.

9.0 TROUBLESHOOTING

The information below indicates various symptoms a user may encounter if the Liebert PSI XR experiences a problem. See **Table 9** for suggested solutions.

1. An alarm sounds, alerting that the UPS requires attention. The alarm can be silenced except for low battery, overload warning and fault.
2. One or more additional indicators will be illuminated to provide a diagnostic aid to the operator, as described below:

If the UPS fails to operate properly, turn Off the unit and repeat the steps in **3.0 - Installation**. If the problem persists, refer to **Table 9**.

Table 9 Troubleshooting—problems, causes and solutions

Problem	Cause	Solution
UPS will not start	Short circuit	Check the circuit breaker on the rear of the UPS. If it is tripped, reset it and restart the UPS. For help, contact your local dealer, local Emerson representative or Channel Support Applications.
	Battery is disconnected or completely discharged	Check for proper connection of battery or batteries.
UPS starts on battery, but will not switch to AC (dark start)	UPS not plugged in	Plug in the power cord securely.
	Circuit breaker tripped	Reset the circuit breaker and restart the UPS.
	AC overvoltage	Wait until voltage drops to an appropriate level or have the utility power checked by a properly trained and qualified electrician.
UPS shuts down	Short circuit or UPS output is abnormal; LED 10 and LED 11 illuminate and sound audible alarm	Remove the load and turn on the UPS again. For help, contact your local dealer, local Emerson representative or Channel Support Applications.
	Overload; LED 5 and LED 11 illuminate and sound audible alarm	Check load level display and remove nonessential loads. Recalculate the load and reduce equipment connected to UPS - the total wattage must not exceed the capacity of the UPS.
	LED 3 and LED 11 illuminate and sound audible alarm	Recharge the battery for 8 hours, then turn ON the UPS.
	Liebert MultiLink software	Consult the Liebert MultiLink user manual or contact your LAN administrator.
Site Wiring Fault LED (LED 4) flashing	Site Wiring Fault, UPS detected a line-to-neutral reversal or a loss of proper grounding.	Have the utility checked by a properly trained and qualified electrician.
Battery weak LED (LED 3) flashing	Batteries weak	Recharge batteries.
	Batteries need to be replaced	Replace batteries.



NOTE

The PS2200RT3-120XR UPS will sound an Overload alarm under certain Low Line conditions when it is fully loaded and it exceeds the input current rating. Unless the load is reduced, the condition will trip the branch circuit breaker.

Ensuring The High Availability Of Mission-Critical Data And Applications.

Emerson Network Power, the global leader in enabling business-critical continuity, ensures network resiliency and adaptability through a family of technologies—including Liebert power and cooling technologies—that protect and support business-critical systems. Liebert solutions employ an adaptive architecture that responds to changes in criticality, density and capacity. Enterprises benefit from greater IT system availability, operational flexibility and reduced capital equipment and operating costs.

Technical Support / Service Web Site

www.liebert.com

Monitoring

800-222-5877

Liebert.monitoring@emerson.com

Outside the US: 614-841-6755

Single-Phase UPS

800-222-5877

upstech@emersonnetworkpower.com

Outside the US: 614-841-6755

Three-Phase UPS

800-543-2378

powertech@emersonnetworkpower.com

Environmental Systems

800-543-2778

Outside the United States

614-888-0246

Locations

United States

1050 Dearborn Drive

P.O. Box 29186

Columbus, OH 43229

Europe

Via Leonardo Da Vinci 8

Zona Industriale Tognana

35028 Piove Di Sacco (PD) Italy

+39 049 9719 111

Fax: +39 049 5841 257

Asia

7/F Dah Sing Financial Centre

108 Gloucester Road

Wanchai

Hong Kong

852 2572 2201

Fax: 852 2519 9210

While every precaution has been taken to ensure the accuracy and completeness of this literature, Liebert Corporation assumes no responsibility and disclaims all liability for damages resulting from use of this information or for any errors or omissions.

© 2008 Liebert Corporation

All rights reserved throughout the world. Specifications subject to change without notice.

® Liebert is a registered trademark of Liebert Corporation.

All names referred to are trademarks or registered trademarks of their respective owners.

SL-23315_REV03_07-09

Emerson Network Power.

The global leader in enabling *Business-Critical Continuity*.

■ AC Power

■ Connectivity

■ DC Power

■ Embedded Computing

■ Embedded Power

■ Monitoring

■ Outside Plant

■ Power Switching & Controls

■ Precision Cooling

EmersonNetworkPower.com

■ Racks & Integrated Cabinets

■ Services

■ Surge Protection

Business-Critical Continuity, Emerson Network Power and the Emerson Network Power logo are trademarks and service marks of Emerson Electric Co.

©2008 Emerson Electric Co.